

QUICK START GUIDE


How to enter the Ethane Compensation manually on the IRwin Methane Leak Detector

1

Press  followed by 


2

Use  to navigate to *IR Ethane Analysis* and press 

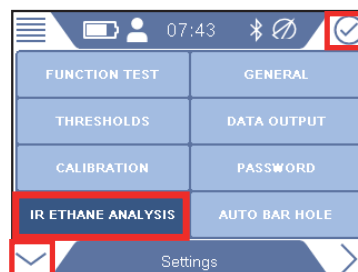

3

Use  to navigate to *Settings* and press 

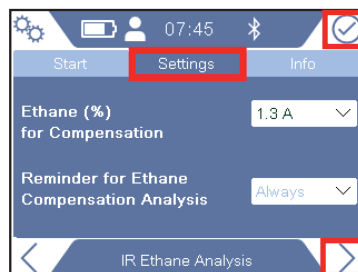

4

Use  to select *Ethane (%) for Compensation*




5

If prompted, enter the Intermediate password code and repeat step 4. If not prompted, go ahead to the next step

6

Use  to navigate to wanted amount, press 

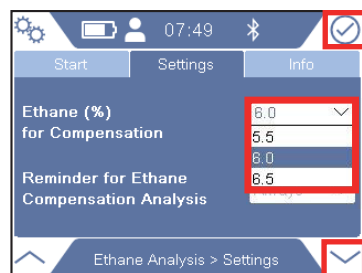

7

Press  followed by  and 